


# QUICK START GUIDE

## ctrlX CORE

ctrlX CORE

### 1 CONNECT THE DEVICE

Connect the power supply unit to the XD10 connection point. Use the Ethernet cable to connect the XF10 engineering interface to your computer.

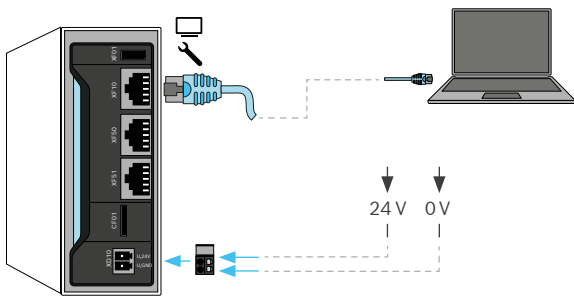


### 2 OPEN NETWORK SETTINGS

Double-click on the control symbol or enter the IP address (https://192.168.1.1) in your browser to open the web interface.


Your web browser indicates an unknown certificate. Show the entire message dialog and click on “proceed” or “go on to webpage”.

Notice: In case of problems, request permission to change network settings or check IT security restrictions with your system administrator.

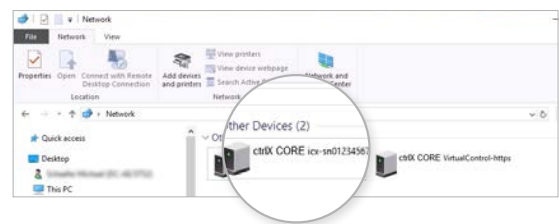

### 3 LOG IN

Log in with the initial access data and accept the terms of use.

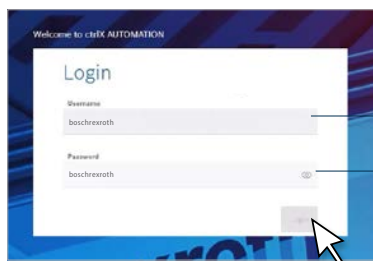


Username:  
**boschrexroth**  
Password:  
**boschrexroth**

### 4 WELCOME TO THE ENGINEERING AREA


Configure and individualize your ctrlX CORE in the web-based engineering.



### COMPONENTS

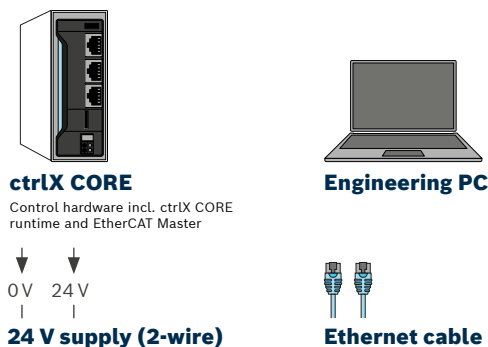

### INTERFACES

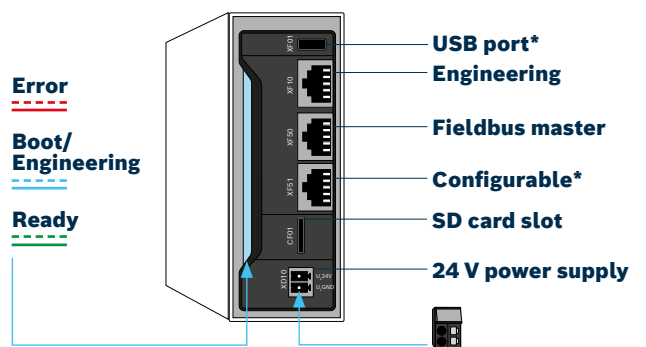

\*not activated for ctrlX CORE X2

More information: [ctrlX AUTOMATION website](#) [ctrlX AUTOMATION Community – How to](#) [Online documentation](#) [Product catalog](#)