Typenschlüssel : Steuerung

MTS-R02.2

Einsteck-SPS Steuerung für RECO-Einheit

INN 44.11-02-02
2000-11-16

Kurztext-Spalte →	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Beispiel:	M	T	S	-	R	0	2	.	2	-	M	2	-	N	N	-	N	N	-	N	N	-	F	W																	

1. Produktgruppe
1.1 MTS . . . . . = MTS

2. Mechanische Ausführung
2.1 für RECO-Einheit . . . . . = R

3. Baureihe
3.1 2 . . . . . = 02

4. Ausführung
4.1 2 . . . . . = 2

5. Betriebsart
5.1 SPS mit 2 MB RAM . . . . . = M2

6. Konfiguration ①
6.1 B1-NN-NN
6.2 B1-P1-NN
6.3 B1-P2-NN
6.4 B1-S4-NN
6.5 NN-NN-NN
6.6 P1-NN-NN
6.7 P1-P2-NN
6.8 P2-NN-NN

7. Firmware
7.1 Kennzeichnung, dass Firmware als separate Unterposition bestellt werden muss = FW

Bemerkung:
① Konfiguration
B1 = INTERBUS-S Master-Modul
S4 = Serielles interface-Modul (2 x RS232 + 2 x RS422)
NN = nicht bestückt
P1 = PROFIBUS-DP Master-Modul
P2 = PROFIBUS-DP Slave-Modul

Bildbeispiel: MTS-R02.2

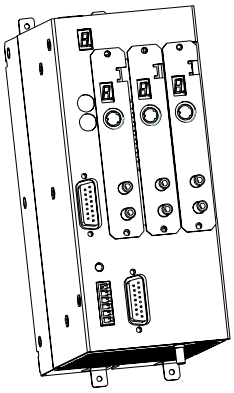

"Schutzvermerk DIN 34 beachten" - "Copyright reserved"

Rexroth Indramat GmbH
Bgm.-Dr.-Nebel-Straße 2 • D-97816 Lohr a. Main
Telefon (0 93 52) 40-0 • Telefax (0 93 52) 40-48 85

geändert: NM, Weißbeck
geprüft: NM, Ehm
erstellt in: FreeHand 8.0

Daten- oder Maßangaben dienen nur der unverbindlichen Information über grundsätzliche Produktmerkmale

Type code : Control unit

MTS-R02.2

Plug-in PLC control unit for RECO unit

INN 44.11-02-02
2000-11-16

Abbrev. Column →	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Example:	M	T	S	-	R	0	2	.	2	-	M	2	-	N	N	-	N	N	-	N	N	-	F	W																	

1. Product group
1.1 MTS . . . . . = MTS

2. Housing design
2.1 for RECO unit . . . . . = R

3. Line
3.1 2 . . . . . = 02

4. Design
4.1 2 . . . . . = 2

5. Operating mode
5.1 PLC with 2 MB RAM . . . . . = M2

6. Configuration ①
6.1 B1-NN-NN
6.2 B1-P1-NN
6.3 B1-P2-NN
6.4 B1-S4-NN
6.5 NN-NN-NN
6.6 P1-NN-NN
6.7 P1-P2-NN
6.8 P2-NN-NN

7. Firmware
7.1 Denotes that firmware must be ordered as separate subposition . . . . . = FW

Note:
① Configuration
B1 = INTERBUS-S master module
S4 = Serial interface module (2 x RS232 + 2 x RS422)
NN = not equipped
P1 = PROFIBUS-DP master module
P2 = PROFIBUS-DP slave module

Illustration example: MTS-R02.2

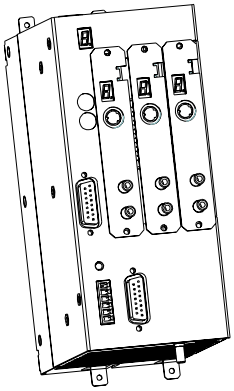

"Schutzvermerk DIN 34 beachten" - "Copyright reserved"

Rexroth Indramat GmbH
Bgm.-Dr.-Nebel-Straße 2 • D-97816 Lohr a. Main
Telephone (0 93 52) 40-0 • Telefax (0 93 52) 40-48 85

revised: NM, Weißbeck
proved: NM, Ehm
draw up in: FreeHand 8.0

Data and dimensions serve to inform about product characteristics and are not binding

Doc: INN-44-11-T02-02-M04-MTS.fh8